Panasonic

Quick Start Guide
Smartphone dL1

Model No. **EB-3901**

Thank you for purchasing a Panasonic smartphone.
This document briefly introduces you to the phone and explains how to use it for the first time.

You can also download the User Guide from the Panasonic web site for further information.
• http://www.panasonic.eu/customer_service.html
• http://panasonic.net/pmc/support/instructions/index.html

SMARTPHONE

Table of Contents

Getting started 3

Confirming the included items 3
Inserting the SIM card 5
Charging the battery 6

Getting to know your phone 7

Phone overview 7
Turning the phone on 8
Unlocking the screen 9
Front panel buttons 10
Home screen 10

Need help? 11

Getting started

Please check and identify the included items, and then insert the SIM card.

Confirming the included items

- **Phone** (x1)
- **AC adaptor** (x1)
- **USB cable** (x1)
- **Stereo headset*** (x1)
- **Barcode masking sticker*** (x1)
  Hide the barcode if desired. Do not cover the microphone.

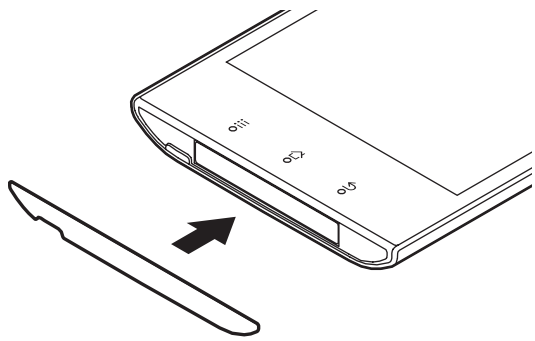

* Not subject to free-of-charge warranty repair.

Product documentation

The following documentation is available for your phone.

Important Information

Provides information about how to use your phone safely.

Quick Start Guide (this document)

Briefly introduces you to the phone and explains how to use it for the first time.

User Guide (available for download)

Introduces you to your phone, explains how to configure and customise it, and provides information and instructions on how to use many of your phone's features. You can download the User Guide from the Panasonic web site; see the front cover for download information.

Notice

- The term "apps" is used in this document to refer to programs that are installed on the phone.
- The illustrations shown in this document are for reference only and may differ from the appearance of the actual product.
- Information in this document is subject to change without notice.

Inserting the SIM card

Your phone's SIM card contains your phone number and service details, and can also be used to store personal information such as your contacts.

1. Open the SIM card slot cover on the top of the phone, and then insert the SIM card into the slot as shown.
   - Insert only a micro SIM card. Do not attempt to insert a full-size SIM card.
   - Note the position of the notched corner of the SIM card in the illustration below and insert the correct end of the card.

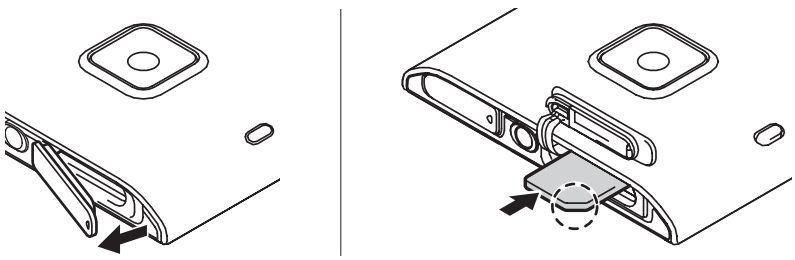

2. Close the SIM card slot cover.

Charging the battery

You can charge your phone by connecting it to a power outlet using the included USB cable and AC adaptor, and also by connecting it to your computer's USB port.

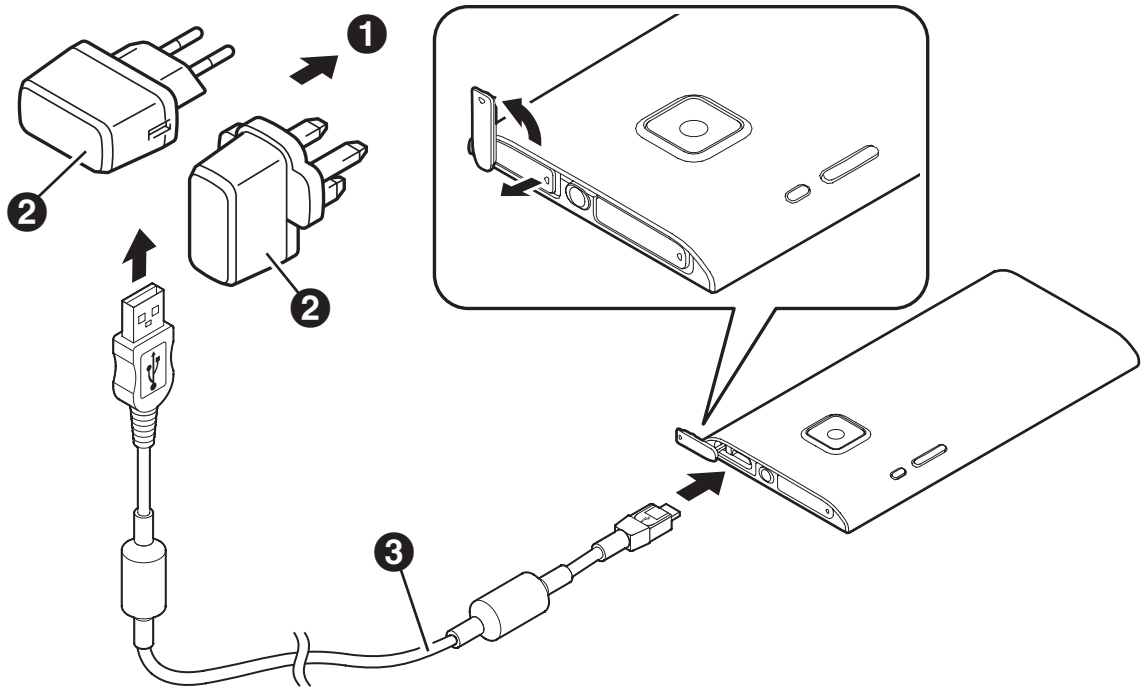

❶ To power outlet
❷ AC adaptor
❸ USB cable

Note

- One AC adaptor is included with the phone.
- The appearance of the AC adaptor varies by country/area of purchase.

Getting to know your phone

Phone overview

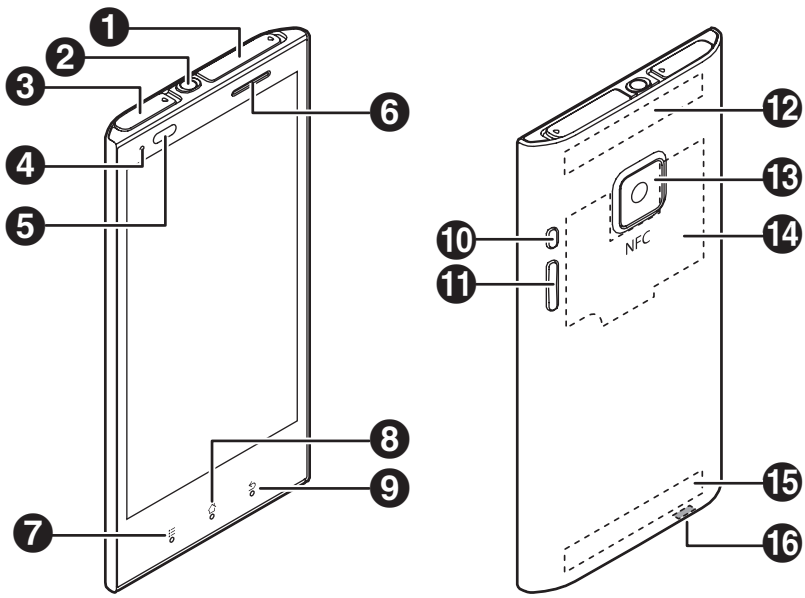

❶ SIM card slot cover
❷ Headset jack
❸ microUSB jack cover
❹ Indicator
❺ Light sensor, proximity sensor
❻ Combination earpiece and speaker
❼ ☰ (menu) button
❽ ⌂ (home) button
❾ ↩ (back) button
❿ ⏻ (power) button
⓫ ▼ and ▲ (volume) buttons
⓬ Wi-Fi, *Bluetooth*, and GPS antenna
⓭ Camera
⓮ NFC antenna
⓯ Main antenna
⓰ Microphone

Turning the phone on

Press and hold ⏻ (power button) on the side of your phone.

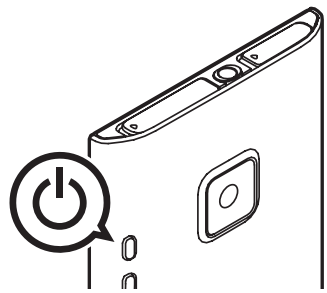

Turning the phone off

Press and hold ⏻ on the side of your phone and follow the on-screen instructions.

Turning the screen on

Press ⏻ on the side of your phone, or press and hold ⌂.

Turning the screen off

Press ⏻ on the side of your phone.

Configuring the phone for the first time

The first time you turn on your phone, you will be prompted to configure different settings. Follow the on-screen instructions and configure each item as needed.

Note

- If you cannot read the language displayed on the screen, tap the button in the lower-right corner of the screen and then select the desired language.

Unlocking the screen

The lock screen prevents you from accidentally tapping your phone and operating it unintentionally. When the lock screen is displayed, you can unlock the screen by tracing the guide from the right side of the screen to the left or from left to right, from the top to bottom or the bottom to top.

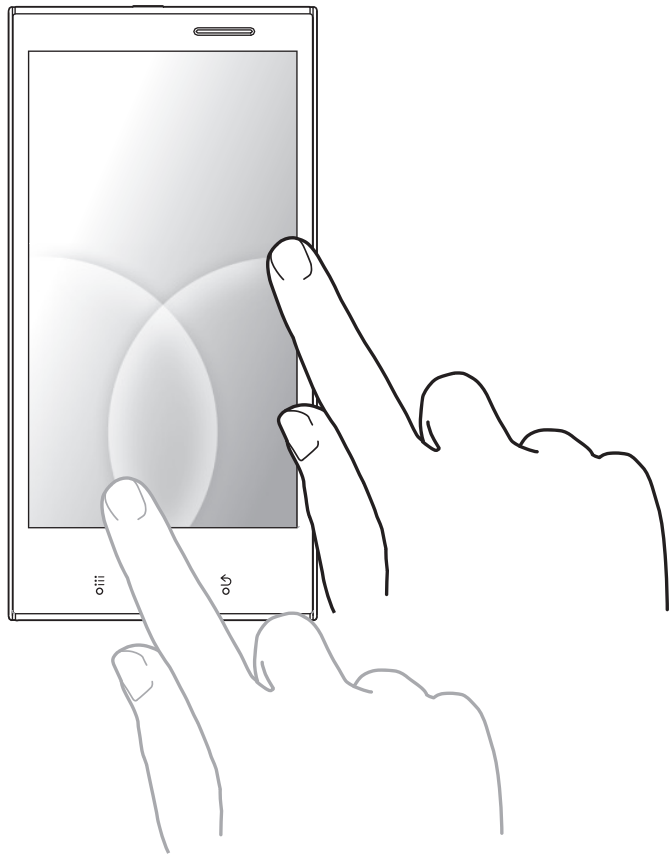

Front panel buttons

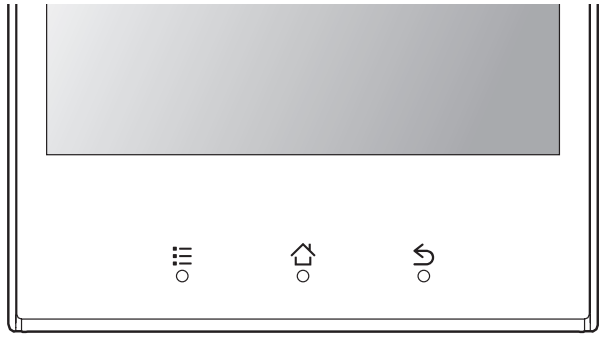

(menu)	Press to display a list of options available in the current screen.
(home)	Press to display the Home screen. Press and hold to display a list of recently used apps.
(back)	Press to return to the previous screen or close the current dialogue box, menu, on-screen keyboard, etc.

Home screen

The Home screen is your phone's main screen from which you can start apps, such as the phone, camera, and web browser, and check widgets.

The Home screen contains multiple pages that you can display by flicking left and right. You can tap an item to launch it, or tap and hold an item to move it. All available apps can be found in the Home screen's application list.

You can access the Home screen anytime by pressing .

Need help?

If you experience any problems with your phone, there are several ways that we can be of assistance.

Troubleshooting

Refer to the Troubleshooting section of the User Guide for assistance in solving any problems you might be having with your phone. See the front cover for download information.

Support on the web

Visit the support web site at http://www.panasonic.eu/customer_service.html for the latest support information, software downloads, FAQs, and more.

Trademarks

- The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Mobile Communications Co., Ltd. is under licence.
- Wi-Fi® is a registered trademark of the Wi-Fi Alliance.
- All other trademarks identified herein are the property of their respective owners.

Panasonic Mobile Communications Co., Ltd.
600 Saedo-cho, Tsuzuki-ku, Yokohama-city, Kanagawa
224-8539 Japan
http://panasonic.net/

Copyright:
This material is copyrighted by Panasonic Mobile Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Mobile Communications Co., Ltd.

© Panasonic Mobile Communications Co., Ltd. 2012

3TR100545AAA

C0412-0
Printed in Malaysia